



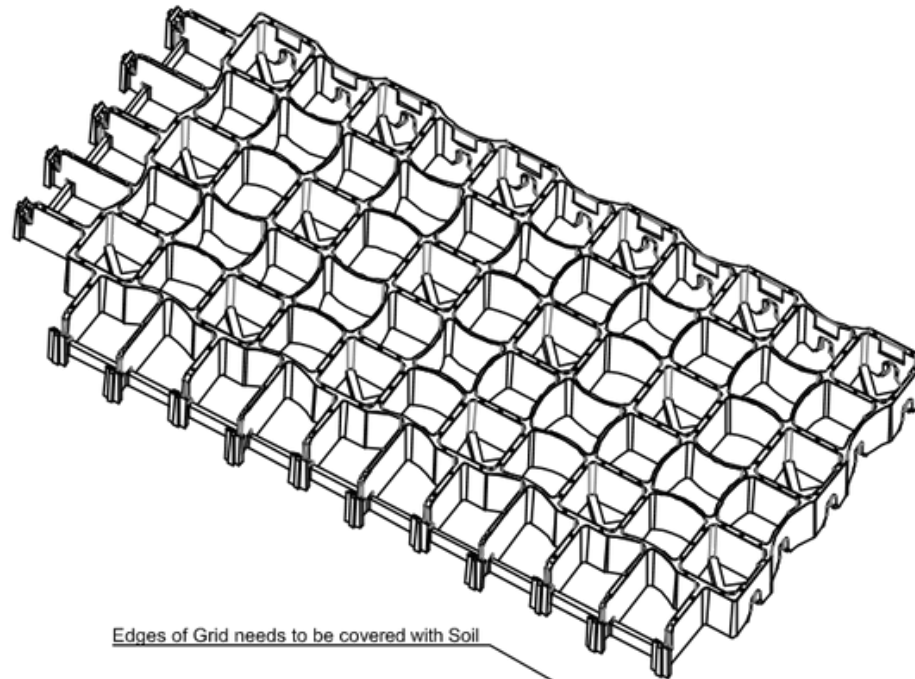

Edges of Grid needs to be covered with Soil

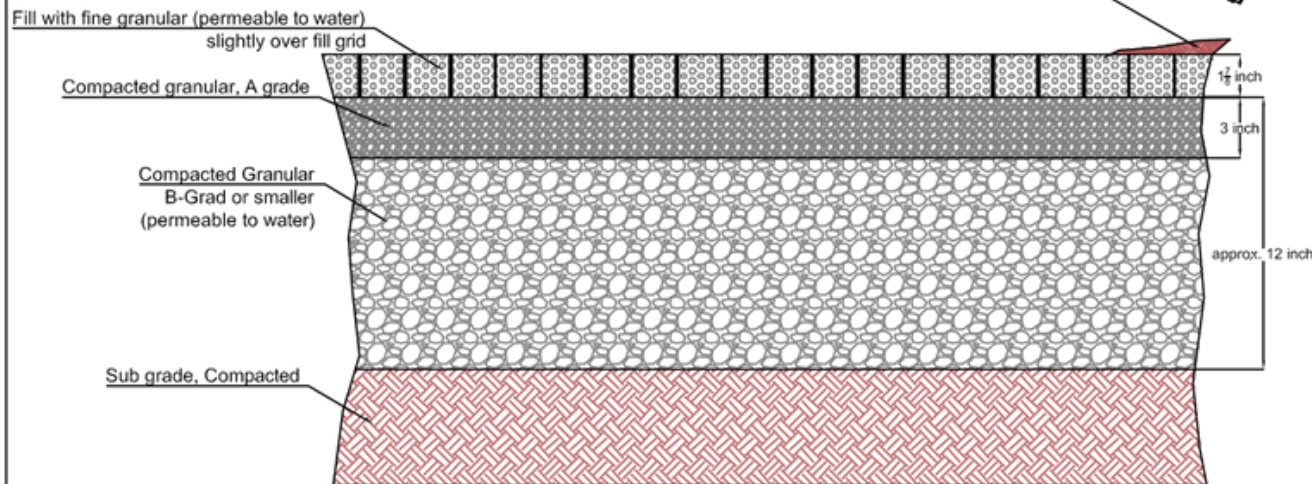

1. Prepare sub grade and granular layers as per Engineer's guideline.
2. It is important that sub grade is water permeable.
3. Thickness of the granular layer depends of the loading and the soil conditions and will have to be determined by an Engineer.
4. Compact B-grade granular base layer.
5. Compact A-grade granular top layer and level it.
6. Install GridX paving grids by snapping connectors into the grooves at adjoining grid.
7. ensure each grid is tightly connected.
8. Fill the opening of the grid with fine granular $\frac{1}{4}$ " stone chips, with slight overfill.
9. Cover outer edges of the installation with topsoil up to 6" out.